

FIRE BRICK INSTALLATION SEQUENCE – WESTFIRE UNIQ 17, 18


1. Log retainer
2. Firebox baffle
3. Side brick right
4. Side brick left
5. Rear fire brick right
6. Cast grate and Steel spacer
7. Base brick right
8. Base brick left
9. Top turbulence baffle



Westfire Uniq 17,18 completed fire chamber.



- 1) Fit Inner top turbulence baffle brick 10 – positioned on secondary air pipe & between two retaining lugs on rear panel of the fire chamber.

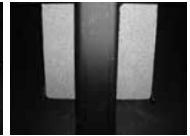

- 2) Fit rear brick 5 – push rear brick into place below stainless steel tertiary air bar with the angled edge to the rear at the bottom.



- 3) Fit base bricks 8, 7 either side of cast ash grate 6 and fit metal spacer to front of stove. This should leave a 5 mm space for the log retail to fit into as the last procedure.



- 4) Fit side bricks 4 & 3 positioned on top base bricks 8 & 7.



- 5) Fit fire box baffle 2 (angled edge resting on the stainless steel tertiary air bar) the baffle is supported with two metal pins which fit into side bricks 4 & 3.



- 6) Slide log retainer 1 into positioned in front of base bricks 8 & 7.

