


VERMICULITE FIRE BRICK INSTALLATION SEQUENCE – WESTFIRE UNIQ21

Installation procedure:

Right inner top baffle brick 2 – positioned on secondary air pipe & side supports.

- 1 – Left Inner Top Baffle Brick
- 2 – Right Inner Top Baffle Brick
- 3 – Rear Brick
- 4 – Left Base Brick
- 5 – Right Base Brick
- 6 – Left Angled Side Brick
- 7 – Right Angled Side Brick
- 8 – Left Side Brick
- 9 – Right Side Brick
- 10 – Top Baffle Brick

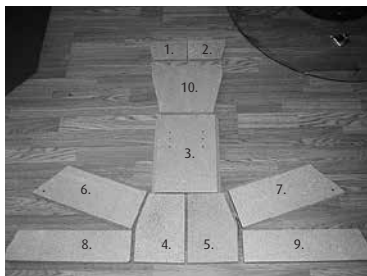

Left inner top baffle bricks 1 positioned on secondary air pipe & side supports.



Left and right angled side bricks 6 & 7 fitted.

Right inner top baffle brick 2 – positioned on secondary air pipe & side supports.



Left and right angled side bricks 6 & 7 fitted.

Top baffle bricks 2 & 3 fitted.



Left and right side bricks 8 & 9 fitted.

Rear brick 3 – line up tertiary air holes. Front face of brick has smaller surface area.



Left and right side bricks 8 & 9 fitted.

Left & right base bricks 4 & 5 fitted – with metal base brick tensioner positioned at side.



Top baffle brick 10 (smallest straight edge resting on top edge of rear brick) fitted and supported with two side pins.