


FIRE BRICK INSTALLATION SEQUENCE – WESTFIRE UNIQ23

Vermiculite brick set for the UNIQ23 freestanding and UNIQ23 inset stove

Installation procedure:

1. Inner Top Turbulence Brick
2. Left Mid Baffle Brick
3. Right Mid Baffle Brick
4. Rear Brick
5. Left Base Brick
6. Left Side Brick
7. Right Base Brick
8. Right Side Brick
9. Outer Top Baffle Brick
10. Rear Base Brick
11. Front Base Brick
12. Grate Support
13. Grate
14. Log Retainer

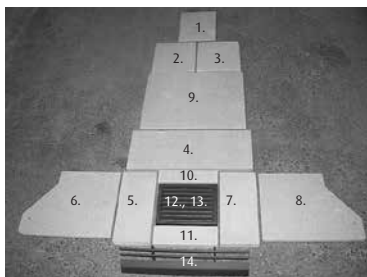

Inner top turbulence brick 1 is positioned on the secondary air pipe with angled edge at rear, sloping down. Brick 1 is held in place with a steel pin.




Right side brick 8 positioned on top of right base brick 7. Right mid baffle brick 3 must be held up to enable brick 8 to be fitted. Brick 3 is then supported by right side brick 8.

Inner top turbulence brick 1 is positioned on the secondary air pipe with angled edge at rear, sloping down. Brick 1 is held in place with a steel pin.



Outer top baffle brick 9 fitted with angled edge at rear sloping down, resting on rear brick 4 and supported by two side pins.

Left & right mid baffle bricks 2 & 3 positioned with full angled edge at front and part angled edge on the outside. Bricks 2 & 3 need to be fitted lower down and slid upwards into final position.

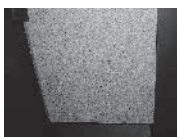

Rear base brick 10 fitted.

Rear brick 4 positioned lining up tertiary air holes with angled edge sloping down at rear.



Front base brick 11 fitted.

Left base brick 5 positioned.



Grate support 12 fitted.

Left side brick 6 positioned on top of left base brick 5. Left mid baffle brick 2 must be held up to enable brick 6 to be fitted. Brick 2 is then supported by left side brick 6.



Grate 13 fitted.

Right base brick 7 positioned.



Log retainer 14 fitted.