



FIRE BRICK INSTALLATION SEQUENCE – WESTFIRE UNIQ32**Installation procedure:**

- 1 Outer Top Baffle Brick
- 2 Left Angled Side Brick
- 3 Right Angled Side Brick
- 4 Rear Brick
- 5 Left Side Brick
- 6 Right Side Brick
- 7 Left Base Brick
- 8 Right Base Brick
- 9 Rear Base Brick
- 10 Front Base Brick
- 11 Base Grate
- 12 Log Retainer
- 13 Inner Top Baffle Brick


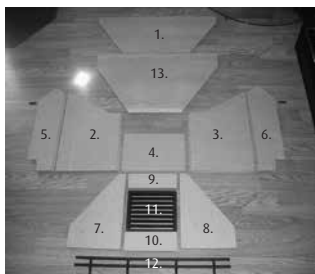


Outer top baffle brick 1 must be held in place and then supported by left and right angled side bricks 2 & 3.

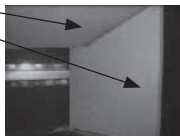

Right base brick 8 fitted.

Outer top baffle brick 1 must be held in place and then supported by left and right angled side bricks 2 & 3.

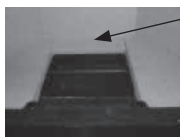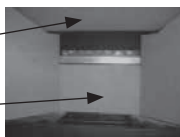


Rear base brick 9 fitted.

Position rear brick 4 below chrome tertiary air bar and push angled side bricks 2 & 3 to butt up against it.




Front base brick 10 fitted.

Left and right side bricks 5 & 6 fitted.

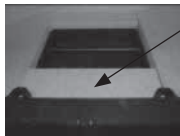

Base grate 11 fitted.

Left and right side bricks 5 & 6 fitted.

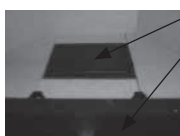

Inner top baffle brick 13 (Angled parallel edge at rear resting on chrome tertiary air bar) fitted and supported with two side pins.

Left base brick 7 fitted.

