


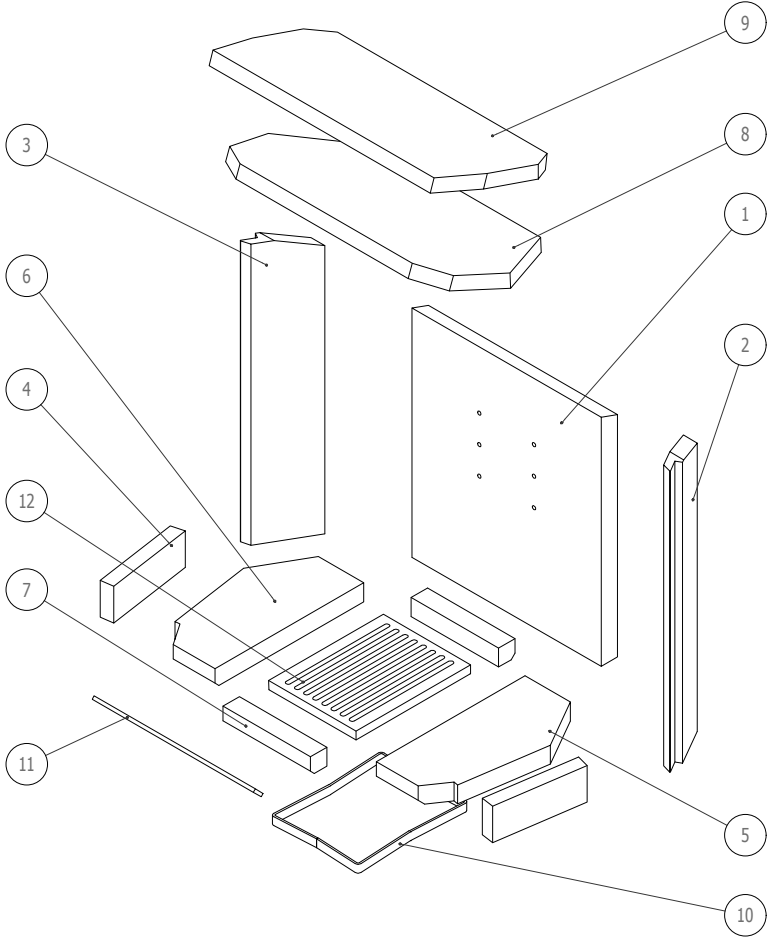

Number	Code	Description	
1	W93700-02-03-99-00	Rear fire brick	
2	W93700-02-24-99-00	Right side rear brick	Part brick set
3		Left side rear brick	
4		Side bricks front x 2	
5	W93700-02-22-99-00	Base right brick	Part brick set
6		Base left brick	
7		Base front and rear brick	
8	W93700-02-04-99-00	Lower baffle brick	
9	W93700-02-05-99-00	Upper baffle brick	
10	W92300-05-07-00-00	Grate support	
11	W93700-04-02-00-00	Log retainer x 2	
12		Cast iron grate	

VERMICULITE FIRE BRICK INSTALLATION SEQUENCE**– WESTFIRE UNIQ36/ WF36 Pedestal and UNIQ37/ WF37 Pedestal**

Place rear brick and side bricks in position making sure side brick fits behind location lugs at top of side windows.



Place Top baffle in position against L shaped lugs leaving 5 cm gap at rear of stove.



Ensure side brick sits behind location holder.

Place front side bricks into position, place side brick into groove at front edge of the stove.



Fit base right and left bricks, place grate support in central position.

Place front and rear base brick. Front front brick has a chamfer which faces towards door glass.



Fit cast iron base grate.

To fit baffle lift baffle into position over baffle supports (left and right) at front then side back to rest on rear vertical brick.



Baffle in position resting on supports.

Fit log retaining bars (12)