


| Number | Code   | Description           |
|--------|--------|-----------------------|
| 1      | 101471 | Upper baffle brick    |
| 2      | 101472 | Lower baffle brick    |
| 3      | 101473 | Rear right brick      |
| 4      | 101474 | Rear left brick       |
| 5      | 101475 | Right side brick      |
| 6      | 101476 | Left side brick       |
| 7      | 101477 | Base right/left brick |



1. Clean fire champer.



2. Place rear brick – right.

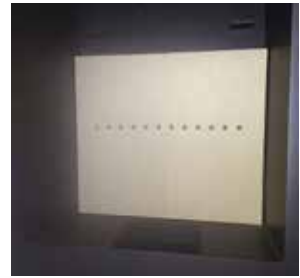

3. Place rear brick – left.



4. Place inner baffel on brackets



5. Place right side brick



6. Place left side brick. Make shure that inner baffel is placed in its rightht position on top of the side brics.



7. To fit baffle lift baffle into position over baffle support stick (left and right).



8. Place bottom brick – right.



9. Place bottom brick – left.



10. Fit cast iron base grate.  
Place log retainer.